


KAFF[®]

Microwave Oven

INSTRUCTION MANUAL

Model:KF-EM036ALMW

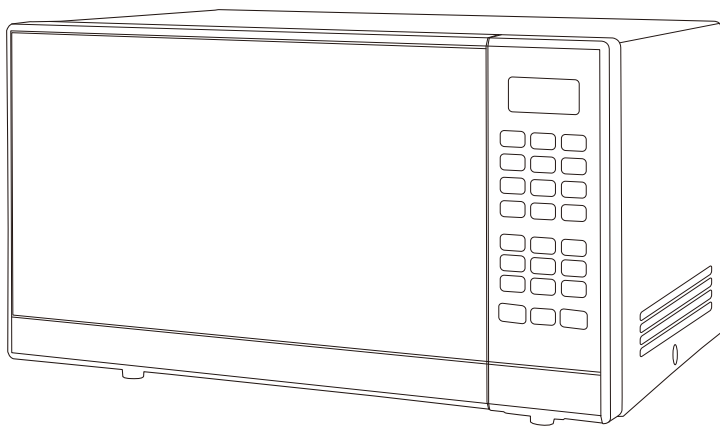

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	KF-EM036ALMW
Rated Voltage:	230V~ 50Hz
Rated Input Power(Microwave):	1500W
Rated Output Power(Microwave):	1000 W

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Children less than 8 years of age shall be kept away unless continuously supervised.
3. Keep the appliance and its cord out of reach of children less than 8 years.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. (For appliance with type Y attachment)

5. WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
6. WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
7. WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. Only use utensils that are suitable for use in microwave ovens.
10. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
11. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
12. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
14. The oven should be cleaned regularly and any food deposits removed.
15. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could

adversely affect the life of the appliance and possibly result in a hazardous situation.

16. The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)

17. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)

18. The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.

19. The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)

20. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- by clients in hotels, motels and other residential type environments;
- farm houses;
- bed and breakfast type environments.

21. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

22. Metallic containers for food and beverages are not allowed during microwave cooking.

23. The appliance shall not be cleaned with a steam cleaner.

24. The appliance is intended to be used freestanding.

25.The rear surface of appliances shall be placed against a wall.

**READ CAREFULLY AND KEEP FOR FUTURE
REFERENCE**

To Reduce the Risk of Injury to Persons

Grounding Installation

DANGER

Electric Shock Hazard
Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard
Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The extension cord must be a grounding-type 3-wire cord.
 - 3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


SETTING UP YOUR OVEN

Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

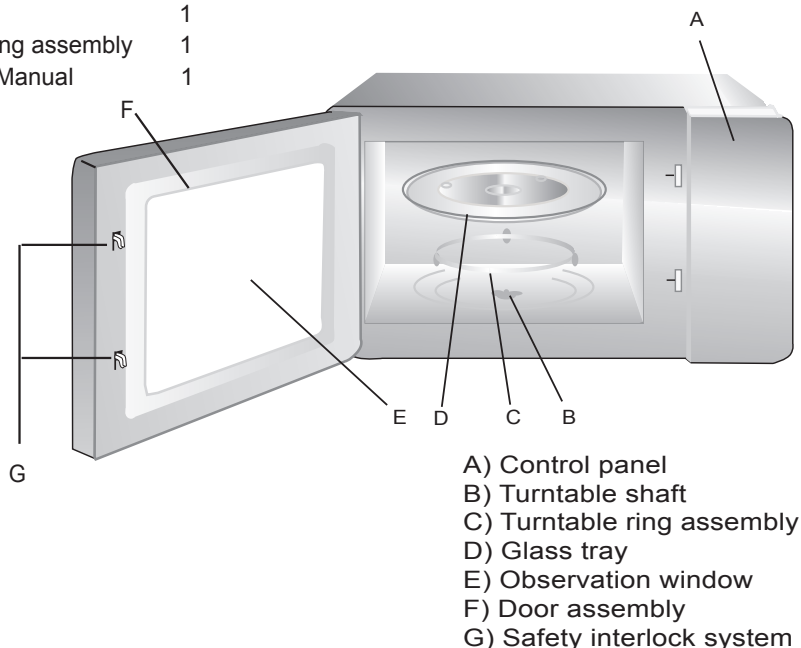

Turntable Installation

Hub (underside)

Glass tray

Turntable shaft

Turntable ring assembly

- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

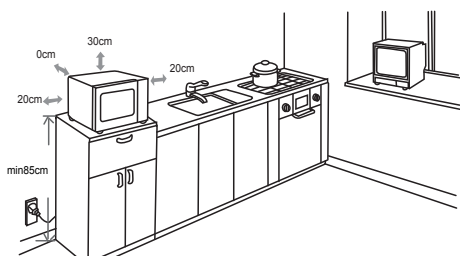

(1) The minimum installation height is 85cm.

(2) The rear surface of appliance shall be placed against a wall.

Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.

(3) Do not remove the legs from the bottom of the oven.

(4) Blocking the intake and/or outlet openings can damage the oven.

(5) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.



OPERATION

1. Power Level

11 power levels are available.

Level	10	9	8	7	6	5	4	3	2	1	0
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0

2. Clock Setting

- (1) Press "**Clock** ", "00:00" will display.
- (2) Press the number keys and enter the current time. For example, time is 12:10 now, please press "1,2,1,0" in turn.
- (3) Press "**Clock** " to finish clock setting. ":" will flash and the clock will be lighted.
- (4) If the numbers input are not within the range of 1:00--12:59, the setting will be invalid until valid numbers are input.

Note: (1) In the process of clock setting, if the "**STOP/Cancel** " button is pressed or if there is no operation within 1 minute, the oven will exit the setting state and the setting is invalid.

- (2) If the clock need to be reset, please repeat step 1 to step 3.
- (3) After power on, if the clock is not set, which will not be displayed .

3. Kitchen Timer

- (1) Press "**Kitchen Timer** ", the screen will display 00:00, the first hour figure flash.
- (2) Press the number keys and enter the timer time.(the maximum cooking time is 99 minutes and 99 seconds)
- (3) Press "**START/+30SEC.** " to confirm setting.
- (4) When the timer time arrives, the buzzer will ring 5 times.
If the clock be set (12-hour system), the screen will display the current time.

Note: 1) The kitchen timer is different from 12-hour system,Kitchen Timer is a timer.
2) During kitchen timer, any program cannot be set.

4. Microwave cook

- (1) Press "**Time Cook** " once, the screen will display "00:00".
- (2) Press number keys to input the cooking time; the maximum cooking time is 99 minutes and 99 seconds.
- (3) Press "**Power** " once, the screen will display "PL10". The default power is 100% power.
Now you can press number keys to adjust the power level.
- (4) Press "**START/+30SEC.**" to start cooking.

Example: to cook the food with 50% microwave power for 15 minutes.

- a. Press "**Time Cook**" once. "00:00" displays.
- b. Press "1", "5", "0", "0" in order.
- c. Press "**Power**" once, then press "5" to select 50% microwave power.
- d. Press "**START/+30SEC.**" to start cooking.

Note: 1) In the process of setting, if the "**STOP/Cancel**" button is pressed or if there is no operation within 1 minute, the oven will exit the setting state and the setting is invalid.

2) If "PL0" selected, the oven will work with fan for no power.

3) During microwave cooking, "**Power**" can be pressed to change the power you need.

After pressing "**Power**", the current power flash for 3 seconds, now you can press number button to change the power. The oven will work with the selected power for the rest time.

5. Speedy Cooking

- (1) In waiting state, instant cooking at 100% power level can be started by select a cooking time from 1 to 6 minutes by pressing number pads 1 to 6. Press "**START/+30SEC.**" to increase the cooking time; the maximum cooking time is 99 minutes and 99 seconds.
- (2) In waiting state, instant cooking at 100% power level with 30 seconds can be started by pressing "**START/+30SEC.**". Each press on the "**START/+30SEC.**" button will increase cooking time by 30 seconds. the maximum cooking time is 99 minutes and 99 seconds.

Note: During microwave cooking and time defrost, time can be added by pressing "**START/+30SEC.**" button.

6. Weight Defrost Function

- (1) Press "**Weight Defrost**", the screen will display "dEF1".
- (2) Press numerical buttons to input weight to be defrosted.
Input the weight ranged between 100~2000 g.
- (3) If the weight input is not within 100~2000 g, the input will be invalid.
- (4) Press "**START/+30SEC.**" to start defrosting and the defrosting time will be displayed and the countdown begins.

7. Time Defrost Function

- (1) Press "**Time Defrost**", the screen will display "dEF2".
- (2) Press number pads to input defrosting time. The effective time range is 00:01~99:99
- (3) The default microwave power is power level 3. If you want to change the power level, press "**Power**" once, and the screen will display "PL 3", then press the number pad of the power level you wanted.
- (4) Press "**START/+30SEC.**" to start defrosting. The remained cooking time will be displayed.

8.POPCORN


a) Press "**Popcorn**" repeatedly until the number you wish appears, "50", "100" g will be displayed in order.

For example, press "**Popcorn**" once, "50" appears.


b) Press "**START/+30SEC.**" to cook, buzzer sounds once. When cooking finish, buzzer sounds five times and then turn back to waiting state.

Important Information About Microwave Popcorn Feature:

1. When selecting 100 g of popcorn, it is suggested that you fold down a triangle on each corner of the bag before cooking. Refer to the picture at right.

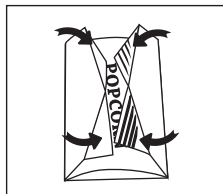

2. When the popcorn bag expands and no longer rotates properly, please press "**STOP/Cancel**" button once and open the oven door to adjust the bag position to ensure even cooking.

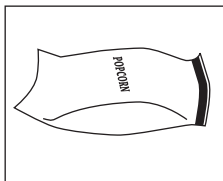

9.POTATO

a) Press "**Potato**" repeatedly until the number you wish appears in the display, "1", "2", "3" will display in order.

"1" SET : 1 potato (approximate 230 gram)

"2" SETS: 2 potatoes (approximate 460 gram)

"3" SETS: 3 potatoes (approximate 690 gram)

For example, press "**Potato**" once, "1" appears.

b) Press "**START/+30SEC.**" to cook, buzzer sounds once. When cooking finish, buzzer sounds five times and then turn back to waiting state.

10.FROZEN VEGETABLE

a) Press "**Frozen Vegetable**" repeatedly until the number you wish appears in the display, "150", "350", "500" g will display in order.

For example, press "**Frozen Vegetable**" once, "150" appears.

b) Press "**START/+30SEC.**" to cook, buzzer sounds once. When cooking finish, buzzer sounds five times and then turn back to waiting state.

11.BEVERAGE

- a) Press "**Beverage**" repeatedly until the number you wish appears in the display, "1", "2", "3" cup will display in order. One cup is about 120ml.
For example, press "**Beverage**" once, "1" appears.
- b) Press "**START/+30SEC.**" to cook, buzzer sounds once. When cooking finish, buzzer sounds five times and then turn back to waiting state.

12.DINNER PLATE

- a) Press "**Dinner Plate**" repeatedly until the number you wish appears in the display, "250", "350", "500" g will display in order.
For example, press "**Dinner Plate**" once, "250" appears.
- b) Press "**START/+30SEC.**" to cook, buzzer sounds once. When cooking finish, buzzer sounds five times and then turn back to waiting state.

13.PIZZA

- a) Press "**Pizza**" repeatedly until the number you wish appears in the display, "100", "200", "400" g will display in order.
For example, press "**Pizza**" once, "100" appears.
- b) Press "**START/+30SEC.**" to cook, buzzer sounds once. When cooking finish, buzzer sounds five times and then turn back to waiting state.

14. MEMORY FUNCTION

- (1) Press "**0/Memory**" to choose memory 1-3 procedure. The screen will display 1,2,3.
- (2) If the procedure has been set, press "**START/+30SEC.**" to use it. If not, continue to set the procedure. Only one or two stages can be set.
- (3) After finishing the setting, press "**START/+30SEC.**" once to save the procedure and turn back to the waiting states. If press "**START/+30SEC.**" again, it will start cooking.

Example: to set the following procedure as the second memory, that is memory 2.

To cook the food with 80% microwave power for 3 minutes and 20 seconds. The steps are as follow:

- a. In waiting states, press "**0/Memory**" twice, stop pressing until the screen displays "2".
- b. Press "**Time Cook**" once, then press "3", "2", "0" in order.
- c. Press "**Power**" once, "PL10" display, then press "8" and "PL8" displays.
- d. Press "**START/+30SEC.**" to save the setting. Buzzer sounds once then turn back to waiting states. If you press "**START/+30SEC.**" twice after step c, the procedure will be saved as the memory 2 and operated.
- e. If the electricity is not cut off, the procedure will be saved all the time. If it is, the procedure need to reset.
- f. If you want to run the saved procedure, in waiting states, press "**0/Memory**" twice, screen displays "2", then press "**START/+30SEC.**" to run.

15. Multi-stage cooking

At most 2 stages can be set for cooking. In multi-stage cooking, if one stage is defrosting, then defrosting shall be placed at the first stage automatically.

Example: if you want to cook with 80% microwave power for 5 minutes + 60% microwave power for 10 minutes. The cooking steps are as following:

- (1) Press "**Time Cook**" once, then press "5", "0", "0" to set the cooking time;
- (2) Press "**Power**" once, then press "8" to select 80% microwave power.
- (3) Press "**Time Cook**" once, then press "1", "0", "0", "0" to set the cooking time;
- (4) Press "**Power**" once, then press "6" to select 60% microwave power.
- (5) Press "**START/+30SEC.**" to start cooking.

NOTE:

- a. Auto cooking menu cannot be used as a part of multi-stage cooking.
- b. When microwave cooking is the second stage of multi-stage cooking, the cooking time must be selected after pressing "**Time Cook**".
- c. The microwave power of multi-stage cooking is limited by magnetron protection function.

16. INQUIRING FUNCTION

- (1) In cooking state, press "**Clock**", the screen will display clock for three seconds.
- (2) In the microwave cooking state, press "**Power**" to inquire microwave power level, and the current microwave power will be displayed. After three seconds, the oven will turn back to the previous state. In multi-stage state, the inquiring way can be done by the same way as above.

17. LOCK FUNCTION FOR CHILDREN

Lock: In waiting state, press "**STOP/Cancel**" for 3 seconds, there will be a long "beep" denoting that the lock is activated; meanwhile, screen will display "     ".

Lock quitting: In locked state, press "**STOP/Cancel**" for 3 seconds, there will be a long "beep" denoting that lock is released.

18. COOKING END REMINDING FUNCTION

When the cooking is over, the buzzer will sound 5 "beep" to alert user the cooking is finished.

19. OTHER SPECIFICATIONS

- (1) In standby mode, if the set clock digital tube displays current time, the icon ": " would flash; otherwise, it shows "0:00".
- (2) In setting function state, the screen displays corresponding setting.
- (3) In working or pause state, the screen displays surplus cooking time.
- (4) At the end of cooking, the buzzer rings 5 times to prompt the user that the cooking is over.

Trouble shooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.




According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

KAFF[®]

Lò vi sóng

SÁCH HƯỚNG DẪN SỬ DỤNG

Mẫu: KF-EM036ALMW

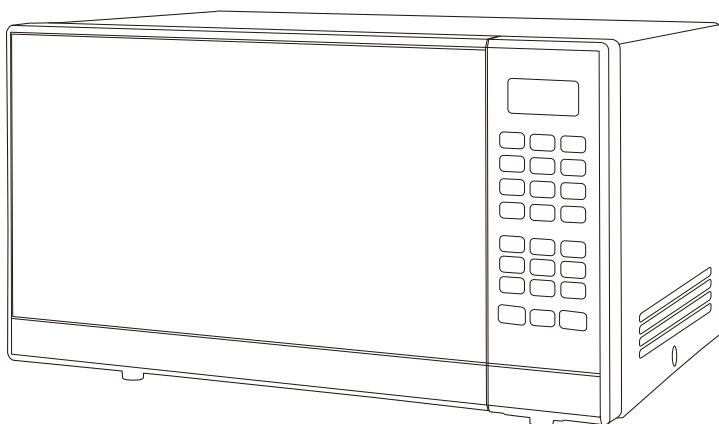

Xin đọc kỹ các hướng dẫn này trước khi sử dụng lò vi sóng và giữ gìn hướng dẫn cẩn thận.

Nếu bạn làm theo hướng dẫn, lò sẽ hoạt động tốt được nhiều năm.

CẤT GIỮ CẨN THẬN CÁC HƯỚNG DẪN NÀY

CÁC BIỆN PHÁP PHÒNG NGỪA ĐỂ TRÁNH NGUY CƠ PHƠI NHIỄM NĂNG LƯỢNG VI SÓNG QUÁ MỨC

- (a) **Đừng cố cho lò vi sóng hoạt động khi mở cửa** bởi nó có thể gây tác hại tiếp xúc với điện vi sóng. Không được làm gãy/vỡ hoặc can thiệp vào khóa liên động an toàn.
- (b) **Không đặt bất kỳ vật nào vào giữa mặt trước của lò và cửa lò hoặc để đất cát hoặc dư lượng chất tẩy rửa tích tụ trên các bề mặt bít kín.**
- (c) **CẢNH BÁO:** Nếu hỏng cửa hoặc đệm cửa thì không được sử dụng lò cho đến khi được người có chuyên môn thẩm quyền sửa chữa.

BỔ SUNG

Nếu không được giữ gìn ở trạng thái sạch sẽ, bề mặt của thiết bị có thể bị xuống cấp, ảnh hưởng đến tuổi thọ của thiết bị và dẫn đến tình huống nguy hiểm.

Thông số kỹ thuật

Mẫu:	KF-EM036ALMW
Điện áp định mức:	230V ~ 50 Hz
Công suất đầu vào định mức (Vi sóng):	1500 W
Công suất đầu ra định mức (Vi sóng):	1000 W

HƯỚNG DẪN AN TOÀN QUAN TRỌNG

CẢNH BÁO

Để giảm nguy cơ cháy nổ, điện giật, thương tích cho con người hoặc tiếp xúc với điện từ quá mức của lò vi sóng khi sử dụng thiết bị này, hãy tuân theo các biện pháp phòng ngừa cơ bản sau:

1. Đọc và tuân thủ hướng dẫn cụ thể: "CÁC BIỆN PHÁP PHÒNG NGỪA ĐỂ TRÁNH NGUY CƠ PHƠI NHIỄM NĂNG LƯỢNG VI SÓNG QUÁ MỨC".
2. Trẻ em từ 8 tuổi trở lên và những người bị suy giảm khả năng thể chất, giác quan, tinh thần hoặc thiếu kinh nghiệm và hiểu biết có thể sử dụng thiết bị này nếu được giám sát hoặc hướng dẫn về cách sử dụng thiết bị an toàn và hiểu rõ các mối nguy hiểm liên quan. Trẻ em không được chơi với thiết bị. Trẻ em không được vệ sinh và bảo trì với tư cách người dùng trừ khi trẻ trên 8 tuổi và được giám sát. Phải giữ trẻ em dưới 8 tuổi tránh xa thiết bị nếu không được giám sát liên tục.
3. Để thiết bị và dây điện ngoài tầm với của trẻ em dưới 8 tuổi.
4. Nếu dây nguồn bị hỏng, việc thay thế phải do nhà sản xuất, đại lý dịch vụ của nhà sản xuất hoặc những người có trình độ tương tự thực hiện để tránh nguy hiểm. (Đối với thiết bị kiểu gắn dây chữ Y)

5. CẢNH BÁO: Đảm bảo tắt thiết bị trước khi thay bóng đèn để tránh nguy cơ bị điện giật.
6. CẢNH BÁO: Sẽ rất nguy hiểm nếu bất kỳ ai không có chuyên môn thẩm quyền thực hiện bất kỳ dịch vụ bảo dưỡng hoặc sửa chữa nào liên quan đến tháo nắp bảo vệ chống tiếp xúc với năng lượng vi sóng.
7. CẢNH BÁO: Chất lỏng và các thức ăn khác không được làm nóng trong hộp kín bởi chúng có thể nổ.
8. Khi hâm nóng thức ăn trong hộp nhựa hoặc hộp giấy, hãy canh chừng lò vì có khả năng bốc cháy.
9. Chỉ dùng các dụng cụ thích hợp với lò vi sóng.
10. Nếu có khói bốc ra, hãy tắt hoặc rút phích cắm của thiết bị và đóng cửa để dập tắt lửa.
11. Hâm nóng thức uống bằng vi sóng có thể dẫn đến hiện tượng sôi bùng lên chậm, vì thế phải cẩn thận khi xử lý hộp chứa.
12. Các chất được chứa trong bình sữa và lọ đựng thức ăn trẻ em phải được khuấy hoặc lắc đều và kiểm tra nhiệt độ trước khi sử dụng để tránh bị bỏng.
13. Trứng còn nguyên vỏ và trứng đã luộc có vỏ cứng không nên làm nóng trong lò vi sóng bởi chúng có thể nổ, ngay cả sau khi dùng quá trình làm nóng của lò vi sóng.
14. Nên vệ sinh và loại bỏ thức ăn bám trong lò vi sóng thường xuyên.
15. Không giữ gìn lò vi sóng trong điều kiện sạch sẽ có thể dẫn đến bề mặt bị xuống cấp tác động xấu đến tuổi thọ của thiết bị và có thể gây ra tình huống nguy hiểm.

16. Không được lắp đặt thiết bị phía sau cửa trang trí để tránh quá nhiệt. (Điều này không áp dụng cho thiết bị có cửa trang trí.)
17. Chỉ sử dụng đầu dò nhiệt độ được khuyến nghị đối với loại lò vi sóng này. (đối với các lò được trang bị để sử dụng đầu dò cảm biến nhiệt.)
18. Lò vi sóng không được đặt trong tủ trừ khi nó đã được thử nghiệm dùng trong tủ.
19. Lò vi sóng phải được hoạt động trong trạng thái mở cửa trang trí. (đối với các lò có cửa trang trí.)
20. Thiết bị này dành cho sử dụng trong gia đình và các ứng dụng tương tự như:
 - khu vực bếp của nhân viên trong cửa hàng, văn phòng và các môi trường làm việc khác;
 - để khách hàng sử dụng trong các khách sạn, nhà nghỉ và các môi trường lưu trú khác;
 - nhà nông trại;
 - môi trường lưu trú nhỏ.
21. Lò vi sóng được dùng để làm nóng thức ăn và thức uống. Sấy khô thức ăn hoặc quần áo và làm nóng miếng đệm giữ ấm, dép lê, xốp cao su, vải ẩm và những thứ tương tự có thể dẫn đến nguy cơ bị thương, bắt lửa hoặc cháy nổ.
22. Không được chứa thức ăn và đồ uống bằng vật kim loại khi nấu bằng lò vi sóng.
23. Không được vệ sinh thiết bị bằng máy làm sạch bằng hơi nước.
24. Thiết bị được thiết kế để sử dụng độc lập.
25. Mặt phía sau của thiết bị phải được đặt tựa vào tường.

ĐỌC KỸ VÀ GIỮ LẠI ĐỂ THAM KHẢO TRONG TƯƠNG LAI

Để giảm nguy cơ chấn thương cho người lắp đặt nổi đất

NGUY HIỂM

Nguy cơ điện giật
Chạm vào một số bộ phận bên trong có thể gây thương tích nghiêm trọng hoặc tử vong. Không tháo rời thiết bị này.

CẢNH BÁO

Nguy cơ điện giật
Nổi đất không đúng cách có thể gây điện giật.
Chỉ cắm vào ổ điện sau khi đã lắp đặt và nổi đất thiết bị đúng cách.

Thiết bị này phải được nổi đất. Trong trường hợp mạch điện bị đoản mạch, nổi đất sẽ làm giảm nguy cơ điện giật bằng cách cung cấp dây thoát cho dòng điện. Thiết bị này được trang bị dây điện có lõi nổi đất với phích cắm tiếp địa. Phích cắm phải được cắm vào ổ cắm được lắp đặt và nổi đất đúng cách.

Hãy hỏi ý kiến của thợ điện hoặc nhân viên bảo dưỡng có chuyên môn nếu chưa hiểu rõ hoàn toàn các hướng dẫn nổi đất hoặc nghi ngờ không biết thiết bị đã được nổi đất đúng cách hay chưa.
Nếu cần sử dụng dây nối dài, chỉ sử dụng dây nối dài 3 lõi.

1. Một dây nguồn ngắn được cung cấp để giảm rủi ro do vướng hoặc vấp phải dây dài.
2. Nếu sử dụng bộ dây dài hoặc dây nối dài:
 - 1) Định mức dòng điện được đánh dấu của bộ dây hoặc dây nối dài ít nhất phải bằng định mức dòng điện của thiết bị.
 - 2) Dây nối dài phải là dây 3 lõi nổi đất.
 - 3) Dây dài phải được bố trí sao cho nó không phủ lên mặt kệ bếp hoặc mặt bàn, nơi trẻ em có thể kéo hoặc vô ý vấp phải.

VỆ SINH

Hãy nhớ rút phích cắm của thiết bị khỏi nguồn điện.

1. Vệ sinh khoang lò sau khi sử dụng bằng khăn hơi ẩm.
2. Vệ sinh phụ kiện theo cách thông thường bằng nước xà phòng.
3. Khung cửa và gioăng cửa và các bộ phận bên cạnh phải được lau chùi cẩn thận bằng khăn ẩm khi bị bẩn.
4. Không sử dụng chất tẩy rửa có tính ăn mòn mạnh hoặc dụng cụ cạo kim loại sắc nhọn để vệ sinh cửa lò vì có thể làm xước bề mặt, dẫn đến vỡ kính.
5. Mẹo vệ sinh---Để thuận tiện cho việc vệ sinh các thành khoang nơi mà thực phẩm nấu chín có thể dính vào: Cho nửa quả chanh vào tô, thêm 300ml (1/2 pint) nước và đun sôi 100% bằng lò vi sóng trong 10 phút. Lau chùi lò vi sóng với khăn vải khô, mềm.

ĐỒ DÙNG THẬN TRỌNG

Nguy cơ thương tích cá nhân

Sẽ rất nguy hiểm nếu bất kỳ ai không có chuyên môn thẩm quyền thực hiện bất kỳ dịch vụ bảo dưỡng hoặc sửa chữa nào liên quan đến tháo nắp bảo vệ chống tiếp xúc với năng lượng vi sóng.

Xem hướng dẫn về "Chất liệu có thể sử dụng trong lò vi sóng hoặc cần tránh sử dụng trong lò vi sóng." Có thể có một số đồ dùng phi kim không an toàn khi sử dụng cho lò vi sóng. Nếu nghi ngờ, bạn có thể kiểm tra đồ dùng đó theo quy trình dưới đây.

Kiểm tra đồ dùng:

1. Đổ đầy 1 cốc nước lạnh (250 ml) vào hộp chứa an toàn với lò vi sóng cùng dụng cụ cần thiết.
2. Nấu ở công suất tối đa trong 1 phút.
3. Cẩn thận cảm nhận đồ dùng đó. Nếu dụng cụ trông đầy đã ấm, không được dùng để nấu trong lò vi sóng.
4. Thời gian nấu không được quá 1 phút.

Chất liệu bạn có thể sử dụng với lò vi sóng

Đồ dùng	Lưu ý
Đĩa nướng	Tuân theo hướng dẫn của nhà sản xuất. Phần đáy của đĩa nướng phải cao hơn đĩa xoay ít nhất 3/16 inch (5 mm). Sử dụng không đúng cách có thể làm cho bàn xoay bị hỏng.
Bộ dụng cụ ăn	Chỉ an toàn với lò vi sóng. Tuân theo hướng dẫn của nhà sản xuất. Không dùng các chén đĩa bị nứt hoặc sứt mẻ.
Lọ thủy tinh	Luôn tháo nắp. Chỉ dùng để làm nóng thức ăn nên khi nó ấm. Hầu hết các lọ thủy tinh không chịu nhiệt và có thể vỡ.
Đồ thủy tinh	Chỉ đồ thủy tinh chịu nhiệt với lò nướng. Đảm bảo không có viền kim loại. Không dùng các chén đĩa bị nứt hoặc sứt mẻ.
Túi nấu ăn lò vi sóng	Tuân theo hướng dẫn của nhà sản xuất. Đừng đóng lại với khóa kim loại. Tạo những khe hở để hơi nước thoát ra.
Tách và đĩa giấy	Chỉ hâm nóng/nấu trong thời gian ngắn. Không được lơ là lò vi sóng khi nấu.
Khăn giấy	Dùng để bọc thức ăn tránh bị khét và chảy mỡ. Dùng với sự giám sát và chỉ nấu trong thời gian ngắn.
Giấy sáp	Dùng như lớp vỏ để chống giọt bắn hoặc gói lại để hấp.
Nhựa	Chỉ an toàn với lò vi sóng. Tuân theo hướng dẫn của nhà sản xuất. Nên được dán nhãn là "An toàn với Lò vi sóng". Và hộp nhựa sẽ mềm ra vì thức ăn bên trong nóng lên. "Túi nấu" và túi nhựa đóng chặt nên được rạch lỗ, xỏ lỗ hoặc thông hơi theo chỉ dẫn đóng gói.
Túi nhựa	Chỉ an toàn với lò vi sóng. Dùng để bọc thức ăn trong suốt quá trình nấu nhằm giữ ẩm. Đừng dùng các bọc nhựa đựng thức ăn.
Nhiệt kế	Chỉ an toàn với lò vi sóng (nhiệt kế thịt và kẹo).
Giấy sáp không thấm nước	Dùng để bao bọc giúp giữ ẩm và ngăn bắn giọt.

Các vật liệu cần tránh cho vào lò vi sóng

Đồ dùng	Lưu ý
Khay nhôm	Có thể gây phóng điện. Cho thức ăn ra đĩa an toàn với lò vi sóng.
Hộp thực phẩm có tay cầm kim loại	Có thể gây phóng điện. Cho thức ăn ra đĩa an toàn với lò vi sóng.
Đồ dùng bằng kim loại hoặc viền kim loại	Kim loại bảo vệ thức ăn tránh khỏi năng lượng vi sóng. Viền kim loại có thể gây phóng điện.
Cà vạt xoắn	Có thể gây phóng điện và cháy trong lò vi sóng.
Túi giấy	Có thể gây cháy trong lò vi sóng.
Xốp nhựa	Xốp nhựa có thể chảy hoặc gây ô nhiễm chất lỏng khi gặp điều kiện nhiệt độ cao.
Gỗ	Gỗ sẽ trở nên khô khi được dùng trong lò vi sóng và có thể rạn nứt.


THIẾT LẬP LÒ

Tên các bộ phận lò và phụ kiện

Lấy lò và tắt cả các vật liệu ra khỏi hộp và khoang lò.

Lò hấp nướng đi kèm với các phụ kiện sau:

Khay thủy tinh	1
Khu bàn ráp vòng xoay	1
Sách hướng dẫn sử dụng	1

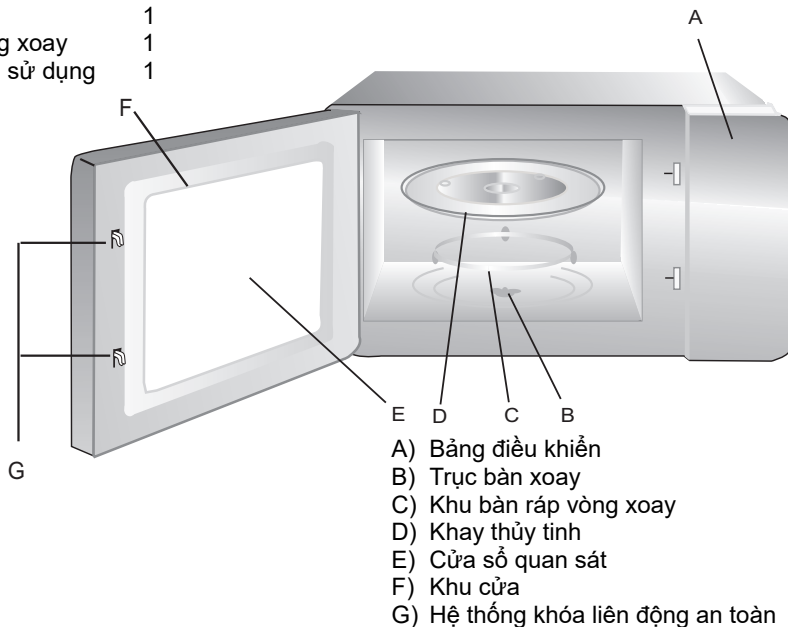

Lắp đặt bàn xoay

Tâm (mặt bên dưới)



- Không được úp khay thủy tinh xuống. Không được tháo khay thủy tinh.
- Cả khay thủy tinh và khu bàn ráp vòng xoay luôn phải được sử dụng trong quá trình nấu.
- Tất cả thức ăn và hộp chứa thức ăn phải luôn được đặt lên khay thủy tinh trong quá trình nấu.
- Nếu khay thủy tinh hoặc khu lắp bàn xoay bị nứt hay vỡ, liên hệ trung tâm dịch vụ có thẩm quyền gần nhất.


Lắp đặt mặt bếp

Lấy tất cả vật liệu đóng gói và phụ kiện ra. Kiểm tra lò xem có bị hư hỏng không, chẳng hạn như vết lõm hoặc cửa bị vỡ. Không lắp đặt nếu lò bị hỏng.

Buồng: Tháo tất cả màng bảo vệ tìm thấy được trên bề mặt lò vi sóng. Không được tháo nắp Mica màu nâu nhạt được gắn vào khoang lò để bảo vệ đèn từ.

Lắp đặt

1. Chọn bề mặt bằng phẳng cung cấp đủ không gian mở cho lỗ thông khí và/hoặc lỗ thoát khí.

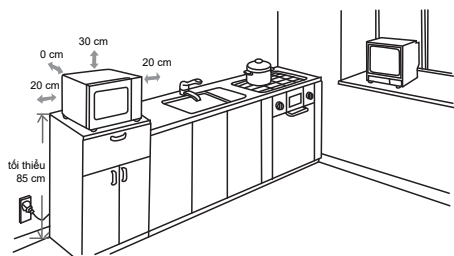

- (1) Độ cao lắp đặt tối thiểu là 85 cm.

- (2) Mặt phía sau của thiết bị phải được đặt tựa vào tường.

Để khoảng trống tối thiểu 30 cm phía trên lò, khoảng trống tối thiểu 20 cm giữa lò và bất kỳ bức tường liền kề nào.

- (3) Không tháo chân khỏi bề mặt lò.

- (4) Chặn lỗ thông khí và/hoặc lỗ thoát khí có thể làm hỏng lò.

- (5) Đặt lò cách máy thu thanh và máy thu hình xa nhất có thể. Hoạt động của bếp điện từ có thể gây nhiễu sóng radio hoặc TV.

2. Cắm lò vào ổ cắm tiêu chuẩn gia đình. Đảm bảo điện áp và tần số bằng với điện áp và tần số trên nhãn thông số.

CẢNH BÁO: Không lắp đặt lò trên mặt bếp rộng hoặc thiết bị sinh nhiệt khác. Nếu lắp đặt gần hoặc trên nguồn nhiệt, lò có thể bị hỏng và sẽ không được bảo hành.

Bề mặt tiếp cận có thể trở nên nóng trong quá trình hoạt động.



VẬN HÀNH

1. Mức công suất

Có sẵn 11 mức công suất.

Mức	10	9	8	7	6	5	4	3	2	1	0
Công suất	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Màn hình	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0

2. Cài đặt đồng hồ

- (1) Nhấn **"Clock"**, "00:00" sẽ hiển thị.
- (2) Nhấn các phím số và nhập thời gian hiện tại. Ví dụ bây giờ là 12:10, bạn hãy nhấn lần lượt "1,2,1,0".
- (3) Nhấn **"Clock"** để hoàn tất cài đặt đồng hồ. ":" sẽ nhấp nháy và đồng hồ sẽ sáng.
- (4) Nếu số nhập không nằm trong phạm vi 1:00--12:59, cài đặt sẽ không hợp lệ cho đến khi nhập vào số hợp lệ.

Lưu ý: (1) Trong quá trình cài đặt đồng hồ, nếu nhấn nút **"STOP/Cancel"** hoặc nếu không có thao tác nào trong vòng 1 phút, lò sẽ thoát khỏi trạng thái cài đặt và cài đặt không còn hiệu lực.
(2) Nếu cần đặt lại đồng hồ, vui lòng lặp lại bước 1 đến bước 3.
(3) Sau khi bật nguồn, nếu không đặt đồng hồ thì đồng hồ sẽ không được hiển thị.

3. Hẹn giờ nấu

- (1) Nhấn **"Kitchen Timer"**, màn hình sẽ hiển thị 00:00, số chỉ giờ đứng trước nhấp nháy.
- (2) Nhấn các phím số và nhập thời gian hẹn giờ. (thời gian nấu tối đa là 99 phút 99 giây)
- (3) Nhấn **"START/+30SEC."** để xác nhận cài đặt.
- (4) Khi thời gian hẹn giờ đến, còi sẽ reo 5 lần.

Nếu đặt đồng hồ (hệ thống 12 giờ), màn hình sẽ hiển thị thời gian hiện tại.

Lưu ý: (1) Hẹn giờ nấu khác với hệ thống 12 giờ, Hẹn giờ nấu là bộ hẹn giờ.
(2) Trong thời gian hẹn giờ nấu, không thể đặt bất kỳ chương trình nào.

4. Nấu bằng vi sóng

- (1) Nhấn **"Time Cook"** một lần, màn hình sẽ hiển thị "00:00".
- (2) Nhấn các phím số để nhập thời gian nấu; thời gian nấu tối đa là 99 phút 99 giây.
- (3) Nhấn **"Power"** một lần, màn hình sẽ hiển thị "PL10". Công suất mặc định là 100% công suất. Bây giờ bạn có thể nhấn các phím số để điều chỉnh mức công suất.
- (4) Nhấn **"START/+30SEC."** để bắt đầu nấu ăn.

Ví dụ: nấu thức ăn ở 50% công suất vi sóng trong 15 phút.

- a. Nhấn **"Time Cook"** một lần, "00:00" hiển thị.
- b. Nhấn lần lượt "1", "5", "0", "0".
- c. Nhấn **"Power"** một lần, sau đó nhấn "5" để chọn 50% công suất vi sóng.
- d. Nhấn **"START/+30SEC."** để bắt đầu nấu ăn.

Lưu ý: 1) Trong quá trình cài đặt, nếu nhấn nút **"STOP/Cancel"** hoặc nếu không có thao tác nào trong vòng 1 phút, lò sẽ thoát khỏi trạng thái cài đặt và cài đặt không còn hiệu lực.

2) Nếu chọn "PL0", lò sẽ hoạt động với quạt ở công suất không.

3) Trong khi nấu bằng vi sóng, có thể nhấn **"Power"** để thay đổi công suất bạn cần.

Sau khi nhấn **"Power"**, công suất hiện tại sẽ nhấp nháy trong 3 giây, bây giờ bạn có thể nhấn nút số để thay đổi công suất. Lò sẽ hoạt động với công suất đã chọn trong thời gian còn lại.

5. Nấu ăn nhanh

- (1) Ở trạng thái chờ, có thể bắt đầu nấu ngay ở mức công suất 100% bằng cách chọn thời gian nấu từ 1 đến 6 phút thông qua việc nhấn các phím số từ 1 đến 6. Nhấn **"START/+30SEC."** để tăng thời gian nấu; thời gian nấu tối đa là 99 phút 99 giây.
- (2) Ở trạng thái chờ, có thể bắt đầu nấu ngay ở mức công suất 100% trong 30 giây bằng cách nhấn **"START/+30SEC."**. Mỗi lần nhấn nút **"START/+30SEC."** sẽ tăng thời gian nấu thêm 30 giây. Thời gian nấu tối đa là 99 phút 99 giây.

Lưu ý: Trong khi nấu bằng vi sóng và hẹn giờ đã đồng, có thể thêm thời gian bằng cách nhấn nút **"START/+30SEC."**.

6. Chức năng rã đông theo trọng lượng

- (1) Nhấn **"Weight Defrost"** một lần, màn hình sẽ hiển thị "dEF1".
- (2) Nhấn các nút số để nhập trọng lượng cần rã đông.
Nhập trọng lượng dao động trong khoảng 100 ~ 2000 g.
- (3) Nếu số nhập trọng lượng không nằm trong phạm vi 100~2000 g, số nhập sẽ không hợp lệ.
- (4) Nhấn **"START/+30SEC."** để bắt đầu rã đông và thời gian rã đông sẽ được hiển thị và quá trình đếm ngược bắt đầu.

7. Chức năng rã đông theo giờ


- (1) Nhấn **"Time Defrost"** một lần, màn hình sẽ hiển thị "dEF2".
- (2) Nhấn các phím số để nhập thời gian rã đông. Phạm vi thời gian khả dụng là 00:01~99:99
- (3) Công suất vi sóng mặc định là mức công suất 3. Nếu bạn muốn thay đổi mức công suất, hãy nhấn **"Power"** một lần và màn hình sẽ hiển thị "PL 3", sau đó nhấn bàn phím số để nhập mức công suất bạn muốn.
- (4) Nhấn **"START/+30SEC."** để bắt đầu rã đông. Thời gian nấu còn lại sẽ được hiển thị.

8. BÔNG NGÔ


- a) Nhấn "**Popcorn**" liên tục cho đến khi xuất hiện số bạn muốn, "50", "100" g sẽ lần lượt hiển thị.
Ví dụ: nhấn "**Popcorn**" một lần, số "50" xuất hiện.
- b) Nhấn "**START/+30SEC.**" để nấu ăn, cài báo một lần. Khi nấu xong, cài báo 5 lần rồi trở về trạng thái chờ.

Thông tin quan trọng về tính năng làm bông ngô bằng vi sóng:

1. Khi chọn 100 g bông ngô, bạn nên gấp một hình tam giác ở mỗi góc của túi trước khi nấu. Tham khảo hình bên phải.

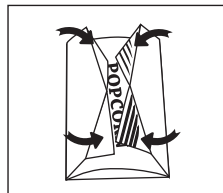

2. Khi túi bông ngô nở ra và không còn xoay đúng cách, vui lòng nhấn nút "**STOP/Cancel**" một lần và mở cửa lò để điều chỉnh vị trí của túi để đảm bảo chín đều.

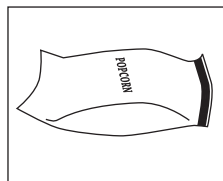

9. KHOAI TÂY

- a) Nhấn "**Potato**" nhiều lần cho đến khi số bạn muốn xuất hiện trên màn hình, lần lượt là "1", "2", "3".
ĐẶT "1": 1 củ khoai tây (khoảng 230 gram)
ĐẶT "2": 2 củ khoai tây (khoảng 460 gram)
ĐẶT "3": 3 củ khoai tây (khoảng 690 gram)
Ví dụ: nhấn "**Potato**" một lần, số "1" xuất hiện.
- b) Nhấn "**START/+30SEC.**" để nấu ăn, cài báo một lần. Khi nấu xong, cài báo 5 lần rồi trở về trạng thái chờ.

10. RAU CỦ ĐÔNG LẠNH

- a) Nhấn "**Frozen Vegetable**" nhiều lần cho đến khi số bạn muốn xuất hiện trên màn hình, lần lượt là "150", "350", "500" g.
Ví dụ: nhấn "**Frozen Vegetable**" một lần, số "150" xuất hiện.
- b) Nhấn "**START/+30SEC.**" để nấu ăn, cài báo một lần. Khi nấu xong, cài báo 5 lần rồi trở về trạng thái chờ.

11. ĐỒ UỐNG

- a) Nhấn "**Beverage**" nhiều lần cho đến khi số bạn muốn xuất hiện trên màn hình, lần lượt là, "1", "2", "3" cốc. Một cốc khoảng 120ml.
Ví dụ: nhấn "**Beverage**" một lần, số "1" xuất hiện.
- b) Nhấn "**START/+30SEC.**" để nấu ăn, cài báo một lần. Khi nấu xong, cài báo 5 lần rồi trở về trạng thái chờ.

12. ĐĨA ĂN TỐI

- a) Nhấn "**Dinner Plate**" nhiều lần cho đến khi số bạn muốn xuất hiện trên màn hình, lần lượt là "250", "350", "500" g.
Ví dụ: nhấn "**Dinner Plate**" một lần, số "250" xuất hiện.
- b) Nhấn "**START/+30SEC.**" để nấu ăn, còi báo một lần. Khi nấu xong, còi báo 5 lần rồi trở về trạng thái chờ.

13. PIZZA

- a) Nhấn "**Pizza**" nhiều lần cho đến khi số bạn muốn xuất hiện trên màn hình, lần lượt là "100", "200", "400" g.
Ví dụ: nhấn "**Pizza**" một lần, số "100" xuất hiện.
- b) Nhấn "**START/+30SEC.**" để nấu ăn, còi báo một lần. Khi nấu xong, còi báo 5 lần rồi trở về trạng thái chờ.

14. CHỨC NĂNG BỘ NHỚ

- (1) Nhấn "**0/Memory**" để chọn quy trình bộ nhớ 1-3. Màn hình sẽ hiển thị 1,2,3.
- (2) Nếu quy trình đã được đặt, nhấn "**START/+30SEC.**" để dừng quy trình đó. Nếu không, tiếp tục đặt quy trình. Chỉ có thể đặt một hoặc hai giai đoạn.
- (3) Sau khi hoàn tất cài đặt, nhấn "**START/+30SEC.**" một lần để lưu quy trình và quay lại trạng thái chờ. Nếu nhấn "**START/+30SEC.**" một lần nữa, lò sẽ bắt đầu nấu.

Ví dụ: để đặt quy trình sau đây làm bộ nhớ thứ hai, thì đó là bộ nhớ 2.

Để nấu thức ăn ở 80% công suất vi sóng trong 3 phút 20 giây. Các bước như sau:

- a. Ở trạng thái chờ, nhấn "**0/Memory**" hai lần, dừng nhấn cho đến khi màn hình hiển thị "2".
- b. Nhấn "**Time Cook**" một lần, sau đó nhấn lần lượt "3", "2", "0".
- c. Nhấn "**Power**" một lần, "PL10" hiển thị, sau đó nhấn "8" và "PL8" hiển thị.
- d. Nhấn "**START/+30SEC.**" để lưu cài đặt. Còi báo một lần rồi chuyển về trạng thái chờ. Nếu bạn nhấn "**START/+30SEC.**" hai lần sau bước c, quy trình sẽ được lưu vào bộ nhớ 2 và được vận hành.
- e. Nếu không ngắt điện thì quy trình sẽ luôn được lưu. Nếu ngắt điện, thì quy trình sẽ cần được đặt lại.
- f. Nếu bạn muốn chạy quy trình đã lưu, ở trạng thái chờ, nhấn "**0/Memory**" hai lần, màn hình hiển thị "2", sau đó nhấn "**START/+30SEC.**" để chạy.

15. Nấu nhiều giai đoạn

Có thể đặt nhiều nhất 2 giai đoạn để nấu. Trong chế độ nấu nhiều giai đoạn, nếu một giai đoạn đang ră đông, thì quá trình ră đông sẽ được đặt tự động ở giai đoạn đầu tiên.

Ví dụ: bạn muốn nấu ở 80% công suất vi sóng trong 5 phút + 60% công suất vi sóng trong 10 phút. Các bước nấu như sau:

- (1) Nhấn "**Time Cook**" một lần, sau đó nhấn "5", "0", "0" để đặt thời gian nấu;
- (2) Nhấn "**Power**" một lần, sau đó nhấn "8" để chọn 80% công suất vi sóng.
- (3) Nhấn "**Time Cook**" một lần, sau đó nhấn "1", "0", "0" để đặt thời gian nấu;
- (4) Nhấn "**Power**" một lần, sau đó nhấn "6" để chọn 60% công suất vi sóng.
- (5) Nhấn "**START/+30SEC.**" để bắt đầu nấu ăn.

LƯU Ý:

- a. Không được sử dụng menu nấu tự động như một phần của chế độ nấu nhiều giai đoạn.
- b. Khi nấu bằng vi sóng là giai đoạn thứ hai của chế độ nấu nhiều giai đoạn, phải chọn thời gian nấu sau khi nhấn "**Time Cook**".
- c. Công suất vi sóng của chế độ nấu nhiều giai đoạn bị giới hạn bởi chức năng bảo vệ từ trường.

16. CHỨC NĂNG TRUY VẤN

- (1) Ở trạng thái nấu, nhấn "**Clock**", màn hình sẽ hiển thị đồng hồ trong ba giây.
- (2) Ở trạng thái nấu bằng vi sóng, nhấn "**Power**" để truy vấn mức công suất vi sóng, và công suất vi sóng hiện tại sẽ được hiển thị. Sau ba giây, lò sẽ quay trở lại trạng thái trước đó. Ở trạng thái nhiều giai đoạn, có thể thực hiện cách truy vấn tương tự như trên.

17. CHỨC NĂNG KHÓA TRẺ EM

Khóa: Ở trạng thái chờ, nhấn "**STOP/Cancel**" trong 3 giây, sẽ có một tiếng "bíp" dài báo hiệu khóa đã được kích hoạt; khi đó, màn hình sẽ hiển thị "".

Bỏ khóa: Ở trạng thái khóa, nhấn "**STOP/Cancel**" trong 3 giây, sẽ có một tiếng "bíp" dài báo hiệu khóa đã được mở.

18. CHỨC NĂNG NHẮC KẾT THÚC NẤU

Khi quá trình nấu kết thúc, còi sẽ phát ra 5 tiếng "bíp" để báo cho người dùng biết quá trình nấu đã kết thúc.

19. THÔNG SỐ KỸ THUẬT KHÁC

- (1) Ở chế độ chờ, nếu đồng hồ dạng ống kỹ thuật số đã đặt hiển thị thời gian hiện tại, biểu tượng ":" sẽ nhấp nháy; nếu không, đồng hồ hiển thị "0:00".
- (2) Ở trạng thái chức năng cài đặt, màn hình hiển thị cài đặt tương ứng.
- (3) Ở trạng thái làm việc hoặc tạm dừng, màn hình hiển thị thời gian nấu thừa.
- (4) Khi kết thúc quá trình nấu, còi sẽ reo 5 lần để nhắc người dùng rằng quá trình nấu đã kết thúc.

Xử lý sự cố

Bình thường

Lò vi sóng gây nhiễu xạ sóng TV	Radio và TV có thể bị nhiễu sóng khi cho lò vi sóng hoạt động. Tương tự đối với các linh kiện điện tử nhỏ như thiết bị xử lý âm thanh, máy hút bụi và quạt điện. Đây là điều bình thường.
Đèn lò bị mờ	Trong trạng thái nấu bằng lò vi sóng với điện yếu, đèn lò có thể bị mờ. Đây là điều bình thường.
Hơi nước tích tụ trên cửa, không khí nóng thoát ra khỏi lỗ thông hơi	Trong quá trình nấu, hơi nước từ thức ăn có thể thoát ra. Hầu hết sẽ thoát ra ngoài qua lỗ thông hơi. Nhưng một số có thể tích tụ lại nơi mát mẻ như cửa lò. Đây là điều bình thường.
Lò vô tình khởi động khi không có thực phẩm bên trong.	Cấm vận hành lò mà không có thực phẩm bên trong. Việc này rất nguy hiểm.

Sự cố	Nguyên nhân có thể có	Biện pháp
Không thể khởi động lò.	(1) Dây nguồn không được cắm chặt.	Rút phích cắm. Cắm lại sau 10 giây.
	(2) Cháy cầu chì hoặc cầu dao đã ngắt điện.	Thay cầu chì hoặc thiết lập lại cầu dao (do kỹ thuật viên của chúng tôi sửa chữa)
	(3) Vấn đề với ổ cắm.	Kiểm tra ổ cắm với các thiết bị điện khác.
Lò không nóng.	(4) Cửa chưa được đóng đúng cách.	Đóng cửa đúng cách.



Theo chỉ thị về Rác thải Thiết bị Điện và Điện tử (WEEE), WEEE cần được thu gom và xử lý riêng. Nếu muốn thải bỏ sản phẩm này, vui lòng KHÔNG thải bỏ cùng với rác thải sinh hoạt. Vui lòng gửi sản phẩm này đến các điểm thu thập WEEE.

